



Canon PowerShot ELPH 150 IS Face Plate Replacement

Replace the face plate/front panel of your Canon PowerShot ELPH 150 IS with these easy steps.

Written By: Alex Larrimore



INTRODUCTION

This guide will help users of all abilities to replace the faceplate/front panel of their camera.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Plate/Menu Buttons



- Locate the ON/Off button on the top of the camera and hold it down until the screen and all lights on the camera go dark.

Step 2



 
- Locate the back plate of the camera (contains the LCD screen and menu buttons).

Step 3



- To remove the back plate you will need to unscrew the 6 support screws securing it to the camera.
- 2 screws are located on the bottom of the camera.
- Remove the screws using a Phillips #00 screwdriver.

Step 4

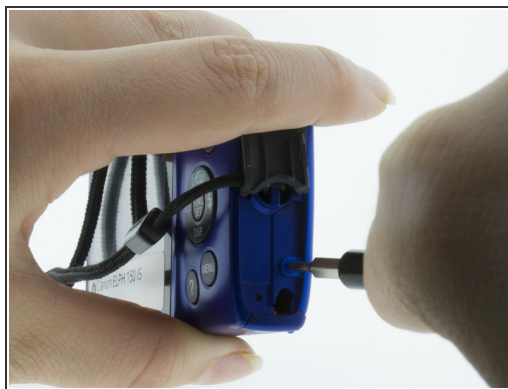

- Remove the 2 screws behind the AV port using the same Phillips #00 screwdriver.

Step 5



- Use a Phillips #00 screwdriver to remove the final 2 screws from the blue side panel.

Step 6



 
- Once screws are removed, gently pry the front plate and backplate apart along the seams on the bottom of the camera.
- Completely remove the back plate.

Step 7 — Face Plate



- Safety First: Power down your camera by holding down the On/Off button on the top of the camera until the screen and all lights go dark.

Step 8

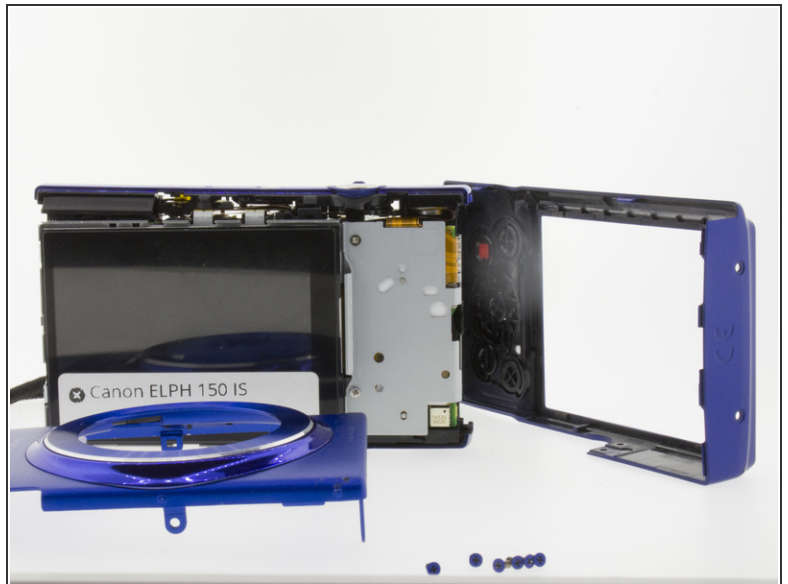

- Remove the back plate off the camera using instructions on this guide: [Use this guide to do so.](#)
- Once the back plate is removed, separate the face plate/front panel from the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-05 07:39:35 PM.